



PRICE LABELLER

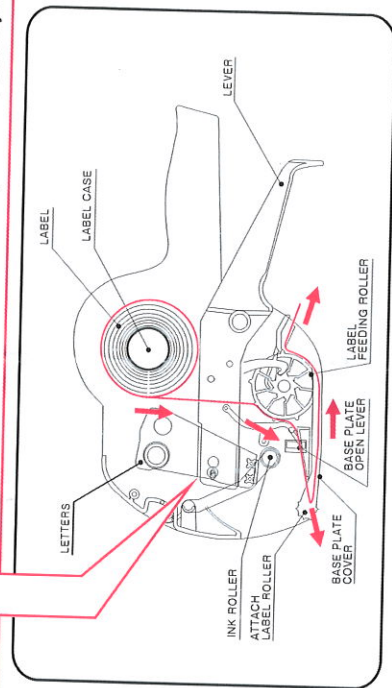

Unfasten one of the bolts on each side of "Letter Head" and fasten the bolt after fixing the position of letters and use.

Be careful not to change the position of letters at your discretion since this labeller already has the proper position of letters for printing from its delivery from the factory.

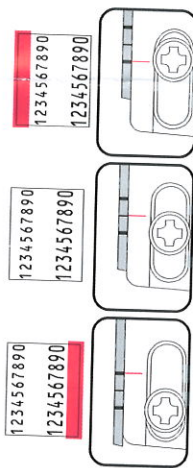

CAUTIONS

It may cause damages or defects to the product when the labeller is dropped over the height of 1m above the ground or when it is hit hard.

The labeller is made of P.O.M. Resin and A.B.S., which is especially heat-sensitive and chemically active; thus, a high temperature, over 60°degrees Celsius, may change the shape and the condition of the product.

Bring the product to designated A/S centers for any problems. We are not responsible for any damages and deficiencies caused by alteration and modification of the product.


Use only our parts and accessories with the product. Replacing any parts that are made from other companies may cause defects.

Also, be careful to use appropriate ink for ink roller. Using other kinds of ink may cause fatal conditions to the bands.


How To Operate Hand Labeller




1 To open the base cover, pull back Opening Buttons that are located on both sides of the labeller.

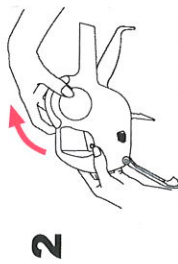


2 Open the cover of the label case as shown.

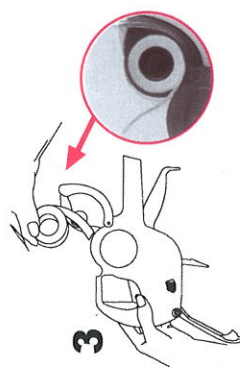


3 Put a label roll into the label

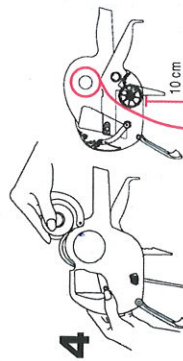


4 Insert label paper to the inside of the labeller and bring it out of the base until about 10cm of the label paper comes out.

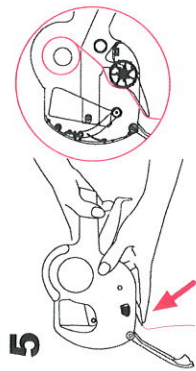


5 Close the base cover.

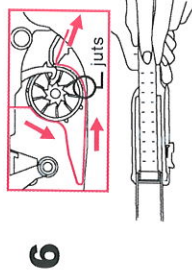

6 Adjust the label paper so that the holes of the paper are folded over juts of the feed roller.

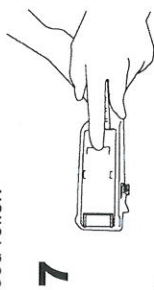


7 Close the base cover making sure that the label paper is tightly rolled over the feed roller.

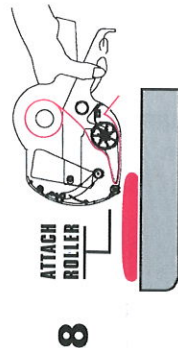


8 Pull the lever of the labeller three times to feed the labels. Attach labels onto your desired position of the product by sliding Attach Roller onto the product

How To Replace Ink Roller

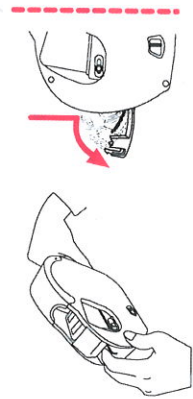


Press and pull the zigzag-shaped cover () to open the Ink Roller Case.

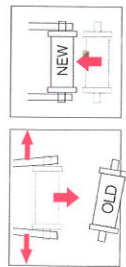

Pull the Ink Roller by the grip and replace the old ink roller with a new one.

Setting Letters

Pull the dial shaft outward and rotate it to set letters. When finished setting letters, push the shaft inward.

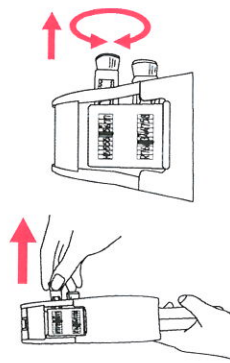

Tip

- ★ Black letter in white background shows the layout of each letter.
- ★ Black letter in white background shows what is printed on the label.
- ★ Yellow background without letter means blank space.