


Loosen the two screws on both sides of labeler close to letter head.



Move them left or right as instructed on above diagram.

*it's better not to change the position frequently.

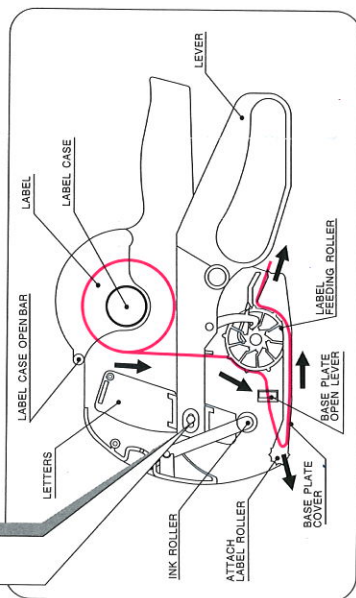

CAUTIONS

- Do not drop the labeler from 1m or higher above the ground or do not expose it to places where shocks occur.
- The Labeler consists of A.B.S. and P.O.M. resin that are sensitive to chemical reactions, especially A.B.S. Do not expose to heat over 60 degrees Celsius(60°C).
- Do not inject general ink into Ink Roller. Special ink should be used for the product, otherwise the band will be damaged.

THE WORLD WIDE CLASS CAPITAL GOODS
Ministry of Commerce, Industry & Energy
Small and Medium Business Administration
National Institute of Technology and Quality Certificate


N.T. MARK New Technology
Ministry of Commerce, Industry & Energy
Small and Medium Business Administration
National Institute of Technology and Quality Certificate

E.M. MARK Excellent Material
Ministry of Commerce, Industry & Energy
Small and Medium Business Administration
National Institute of Technology and Quality Certificate


PRICE LABELLER



Operating Instructions

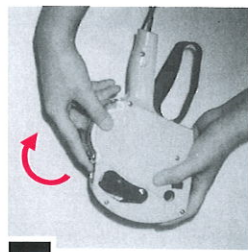



Pull out **Label Case** as shown.

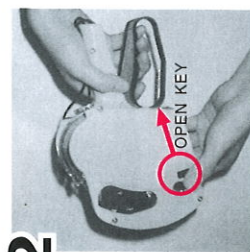



Pull out **Base Plate** by pulling back **Plate Open Keys** on both sides of labeler.




Load **Label Hanger** inside of Label Case.

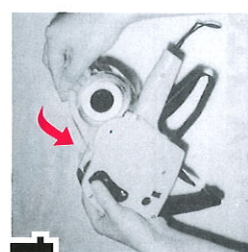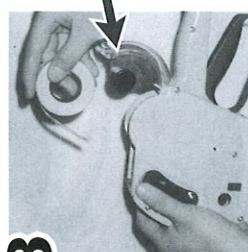



Insert Roll into Tunnel above "**LABEL**" sign until you see 10cm of label paper coming out of the bottom. Then close **Label Roll Cover**.

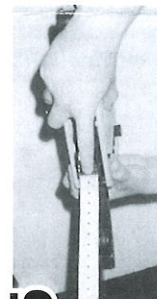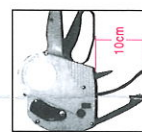


Close **Base Plate**.

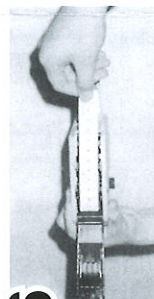

Line up **Holes** with Feed Roller's sprocket pins : prominent parts.

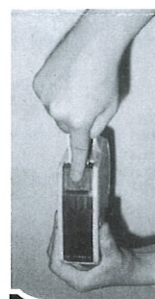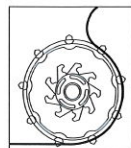


Close **Base Plate Cover**. Be careful not to detach stickers of label.

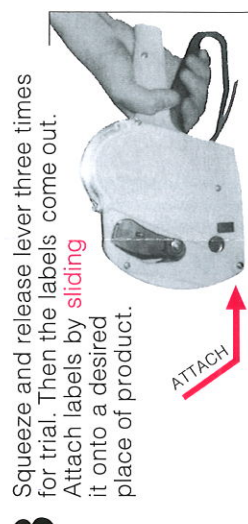



Squeeze and release lever three times for trial. Then the labels come out. Attach labels by **sliding** it onto a desired place of product.

ATTACH LABEL ONTO DESIRED PLACE OF PRODUCT.



Replacing Ink Roller

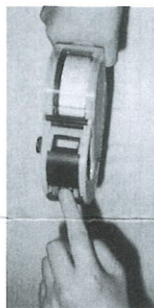

Press and pull apart **Ink Roller Case**.

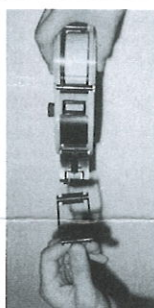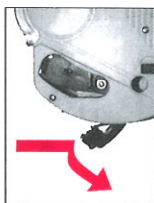


Pull **Ink Roller Holder** by its grip.

  


* Widen Ink Roller Holder's sides, and replace Ink Roller with a new one.

Setting Letter Head

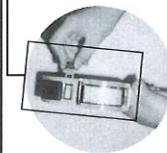

1. Pull out or push in Dial Shaft to a desired digit of **letter-band** then turn the shaft.

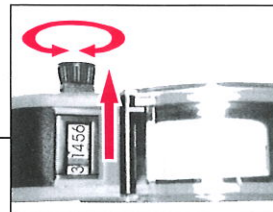

2. After you set up all letters, push in the shaft completely.